ROTARY DISPLAY TOOL MERCHANDISER ASSEMBLY INSTRUCTIONS

Please verify hardware contents before beginning display setup.

(XCCV ·	1-1/4" cap screw qty: 4	A Statement	1" metal screw qty: 48		5/16" kep nut qty: 4	ß	hitch pin qty: 1
¢	100002	1/2" machine screw qty: 16	0	5/16" washer qty: 8	and the second s	1/4" kep nut qty: 4		casters qty: 4



PO Box 930259 Wixom, MI 48393 Ph: 800.762.6002 Fax: 800.762.1295 www.ktoolinternational.com



ROTARY DISPLAY TOOL MERCHANDISER ASSEMBLY INSTRUCTIONS

Attach the four casters to the bottom square panel by placing one of the 5/16" washers onto the threaded stud on each caster and then inserting the threaded stud on the casters up through the small holes in the bottom of the panel and then securing each in place using a 5/16" washer and a 5/16" kep nut. See **Figure 3** below.

Attach the axis tube to the top of the base by inserting four 1-1/4" long screws up through the bottom of the base and then placing the axis tube plate so that the four screws come through the four holes in the plate. Secure the axis tube in place using the four 1/4" kep nuts as illustrated in **Figure 3**.

Attach the base to the bottom panel by inserting the axis tube up through the center hole in the bottom panel. The casters rest on the base. Insert the hitch pin through the two holes in the axis tube to secure it in place. See **Figure 3.**





31111 Old Wixom Road PO Box 930259 Wixom, MI 48393 Ph: 800.762.6002 Fax: 800.762.1295 www.ktoolinternational.com

